




Pocket Tool

[www.hellermann.tyton.com](http://www.hellermann.tyton.com)  
800-537-1512

# POCKET TOOL INSTRUCTIONS


HellermannTyton

## STEP 1

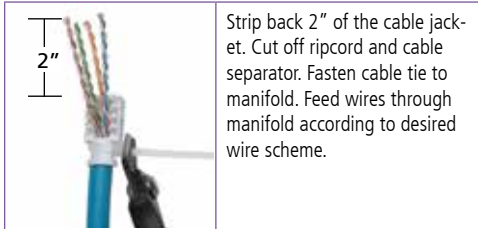


Strip back 2" of the cable jacket. Cut off ripcord and cable separator. Fasten cable tie to manifold. Feed wires through manifold according to desired wire scheme.

## STEP 2

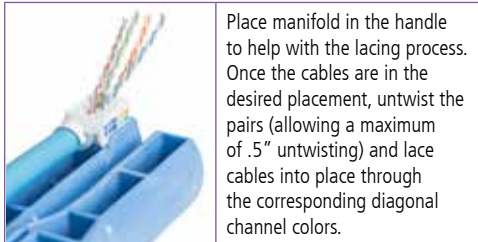


Place manifold in the handle to help with the lacing process. Once the cables are in the desired placement, untwist the pairs (allowing a maximum of .5" untwisting) and lace cables into place through the corresponding diagonal channel colors.

## STEP 3

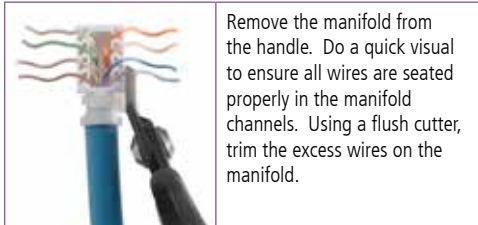


Remove the manifold from the handle. Do a quick visual to ensure all wires are seated properly in the manifold channels. Using a flush cutter, trim the excess wires on the manifold.

## STEP 4

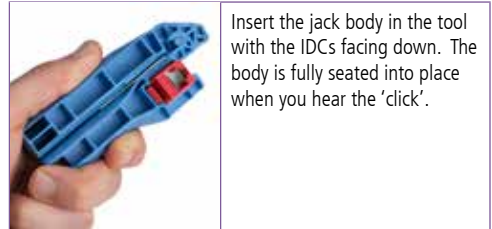


Insert the jack body in the tool with the IDCs facing down. The body is fully seated into place when you hear the 'click'.

## STEP 5

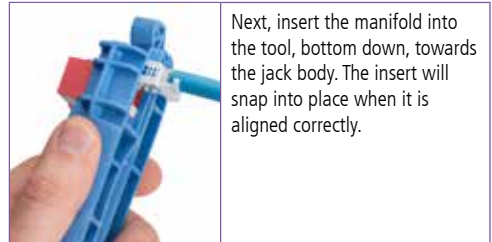

Next, insert the manifold into the tool, bottom down, towards the jack body. The insert will snap into place when it is aligned correctly.

## STEP 6

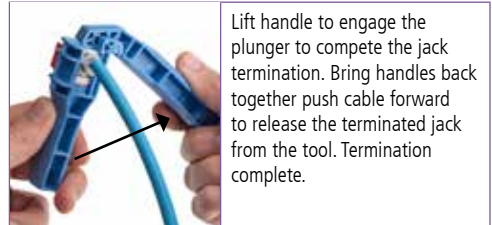

Lift handle to engage the plunger to complete the jack termination. Bring handles back together push cable forward to release the terminated jack from the tool. Termination complete.